

WIRING DIAGRAM 1974 FIAT 128 SEDAN

DESCRIPTION OF COMPONENTS

- | | | | |
|------|--|-------|--|
| 1 | High/Low beam headlights | 30 | Turn signal flasher |
| 2 | Front turn signal lamps | 32 | Vehicular hazard warning signal flasher |
| 3 | Parking lamps | 35 | Windshield wiper motor |
| 4 | Front side marker lamps | 37 | Two-speed heater fan motor |
| 5 | Alternator | 37/1 | Engine and carburetor fan motor |
| 6 | Ignition regulator | 38 | Relay for motor 37/1 - Engine fan operation |
| 9 | Ignition distributor | 38/1 | Relay for motor 37/1 - Carburetor cooling with engine OFF |
| 10 | Ignition coil | 38/2 | Relay for motor 37/1 - Carburetor cooling with engine ON |
| 12 | Starter motor | 40 | Ideogram lighting potentiometer |
| 14 | Horns | 42 | Turn signal indicator switch |
| 17 | Engine water temperature gauge sending unit | 42/1 | High/Low beams change-over switch |
| 18 | Low oil pressure indicator sending unit | 42/2 | Wiper/washer three-position switch |
| 19 | Brake system effectiveness indicator switch | 44 | Steering lock ignition switch |
| 23 | Battery | 46 | Lighting switch (controls also cluster lights) |
| 25 | Back-up lamp switch | 48 | Heater fan motor three-position switch |
| 26 | Stop light switch | 50 | Vehicular hazard warning signal switch with incorporated light |
| 28 | Fuses | 51 | Eight-indication instrument cluster |
| 28/1 | 16-Amp fuse | | |
| 28/2 | 8-Amp fuse | | |
| 54 | Engine water temperature gauge | 89 | License plate lamp |
| 57 | Fuel gauge | 100 | Backup lamp |
| 61 | Fuel reserve indicator (Red) | 103 | Thermostatic switch (intake manifold) for motor 37/1 |
| 63 | Low oil pressure indicator (Red) | T04 | Thermostatic switch (on radiator) for motor 37/1 |
| 64 | Turn signal indicator (Flashes Green) | 120 | Fuel pump |
| 65/1 | Vehicular hazard warning indicator (Flashes Red) | 121 | Fuel pump relay (at engine running) |
| 65/2 | Brake system effectiveness indicator (Red) | 121/1 | Fuel pump relay (at engine starting) |
| 66 | Battery charge indicator (Red) | 126 | Faster bolts and remove key buzzer |
| 67 | Parking and tail lights indicator (Green) | 128 | Relay for buzzer 126 |
| 68 | High beams indicator (Blue) | 128/1 | Starter relay |
| 76 | Hand brake ON switch | 161 | Optical fiber illumination light source |
| 79 | Horn buzzer | 189 | Interlock system electronic control unit |
| 84 | Washer pump motor | 194 | Button switch on driver's side belt |
| 87 | Courtesy light jamb switch | 194/1 | Strip switch in driver's seat cushion |
| 87/1 | Remove key indicator jamb switch (driver's door) | 194/2 | Clear-engaged signal button switch |
| 89 | Courtesy lights with switch | 194/3 | Button switch on passenger's side belt |
| 93 | Fuel gauge sending unit | 194/4 | Strip switch in passenger's seat cushion |
| 98 | Tail, turn signal and stop lights unit | 195 | Interlock by-pass switch |
| 98/1 | Rear side marker lamps | | |

WIRING COLOR CODE

- | | |
|----------------|------------|
| A - light blue | M - brown |
| B - white | N - black |
| C - amber | R - red |
| G - yellow | S - pink |
| H - grey | V - green |
| L - dark blue | Z - violet |

- | |
|------------------------|
| AB - light blue/white |
| AG - light blue/yellow |
| AN - light blue/black |
| AR - light blue/red |
| BN - white/black |
| BR - white/red |
| CB - amber/white |
| GN - yellow/black |
| GR - yellow/red |
| HG - grey/yellow |
| HN - grey/black |
| HR - grey/red |
| LR - dark blue/red |
| MB - brown/white |
| NZ - black/violet |
| RV - red / green |
| SG - pink/yellow |
| VB - green/white |
| VN - green/black |
| ZB - violet/white |

