


WIRING DIAGRAM

1974 FIAT 128 SPORT L

DESCRIPTION OF COMPONENTS

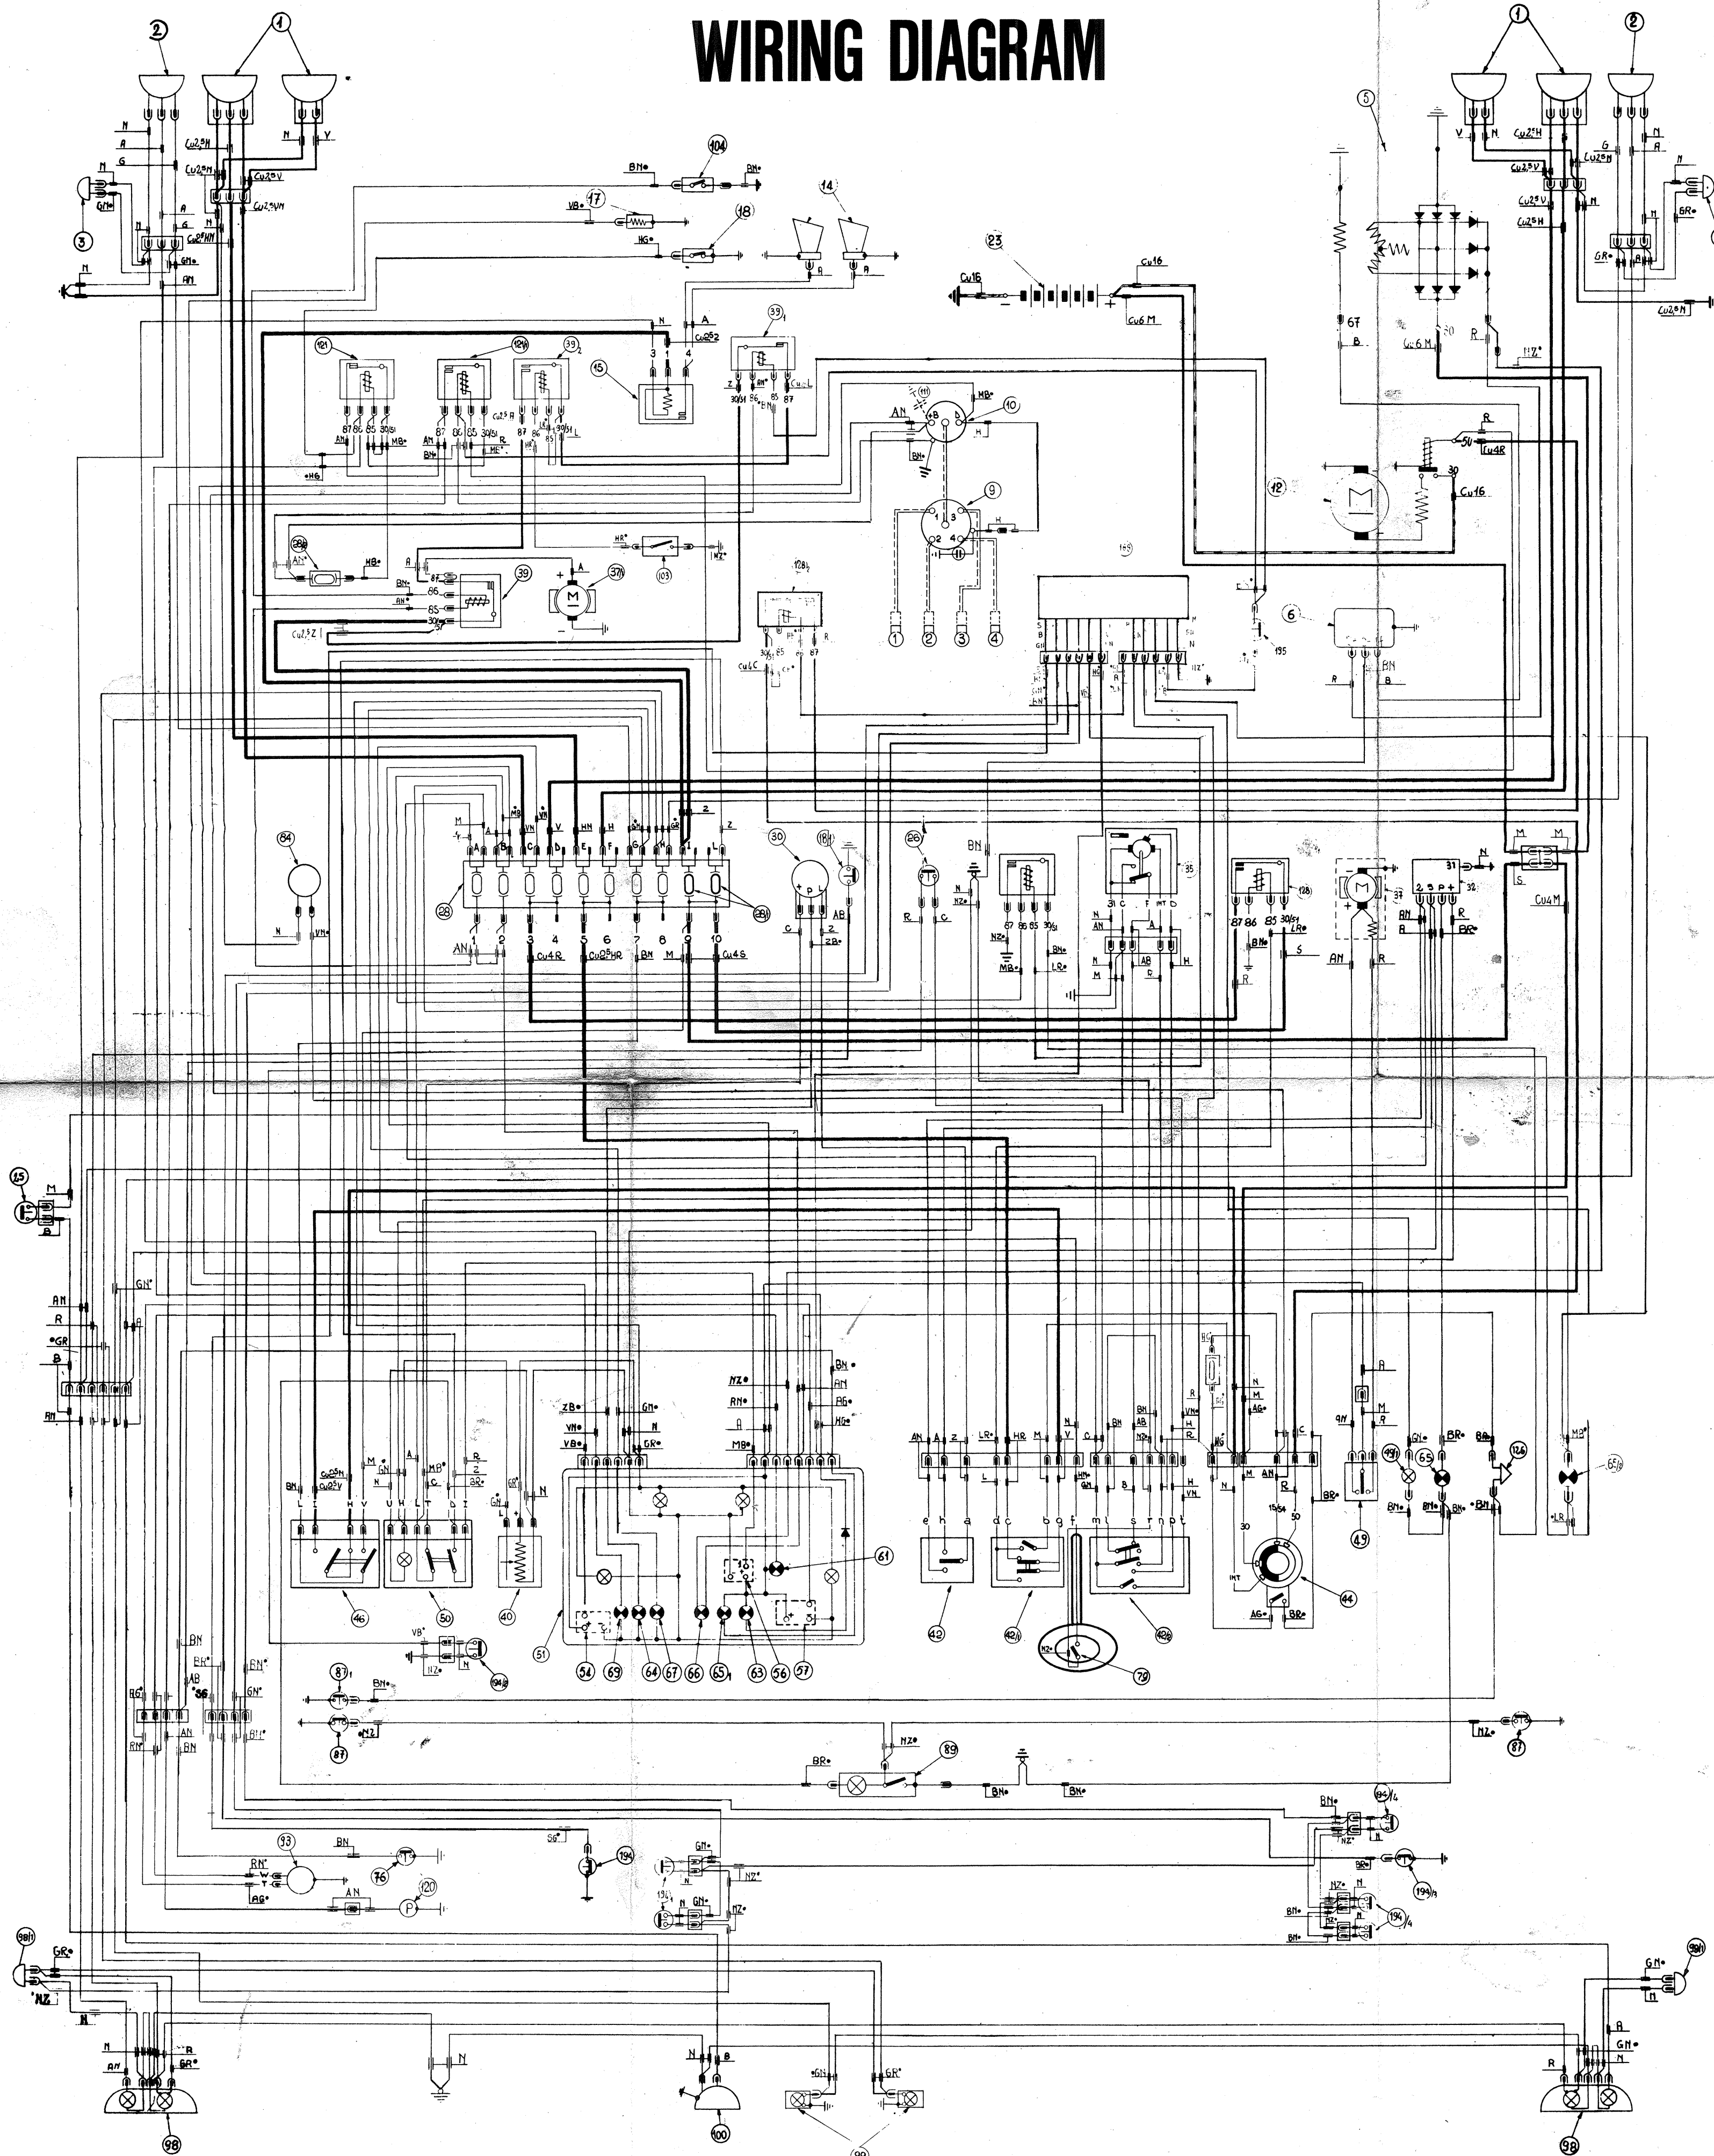

- | | |
|--|---|
| 1 High/Low beam headlights | 32 Vehicular hazard warning signal flasher |
| 2 Front parking and turn signal lamps | 36 Windshield wiper motor |
| 3 Front side marker lamps | 37 Two-speed heater fan motor |
| 4 Alternator | 37/1 Engine and carburetor fan motor |
| 5 Voltage regulator | 38 Relay for motor 37/1 - Engine fan cooling with engine OFF |
| 6 Ignition distributor | 39/1 Relay for motor 37/1 - Carburetor cooling with engine ON |
| 7 Ignition coil | 40 (Stem) lighting potentiometer |
| 12 Starter motor | 42 Turn signal indicator switch |
| 14 Horn | 42/1 High/Low beams change-over switch |
| 15 Horn relay | 42/2 Wiper/washer three-position switch |
| 17 Engine water temperature gauge sending unit | 44 Steering lock ignition switch |
| 18 Low oil pressure indicator sending unit | 46 Lighting switch (controls also cluster lights) |
| 18/1 Brake system effectiveness indicator switch | 48 Heater fan motor three-position switch |
| 22 Battery | 49/1 Heater controls tag light |
| 22 Back-up lamp switch | 49 Vehicular hazard warning signal switch with incorporated light |
| 26 Stop light switch | 51 Ten-indicator instrument cluster |
| 28 Fuses | 54 Engine water temperature gauge |
| 28/1 16Amp fuse | |
| 28/2 8Amp fuse | |
| 28/3 3Amp fuse | |
| 30 Turn signal flasher | |

- | | |
|---|--|
| 56 Tachometer | 100 Backup lamp |
| 57 Fuel gauge | 103 Thermostatic switch (intake manifold) for motor 37/1 |
| 61 Fuel reserve indicator (Red) | 106 Thermostatic switch (on radiator) for motor 37/1 |
| 64 Low oil pressure indicator (Red) | 120 Fuel pump |
| 64 Turn signal indicator (Flashes Green) | 121 Fuel pump relay (engine running) |
| 65 Vehicular hazard warning indicator (Flashes Red) | 121/1 Fuel pump relay (at engine starting) |
| 65/1 Brake system effectiveness indicator (Red) | 126 Fasten belts and remove key buzzer |
| 65/2 Fasten belts indicator (Red) | 128 High beams relay |
| 67 Battery charge indicator (Red) | 128/1 Relay for buzzer 126 |
| 67 Parking and tail lights indicator (Green) | 128/2 Starter relay |
| 69 High beams indicator (Blue) | 130 Interlock system electronic control unit |
| 78 Hand brake ON switch | 134 Button switch on driver's side belt |
| 79 Horn button | 134/1 Strip switch in driver's seat cushion |
| 84 Washer pump motor | 134/2 Clear-engaged signal button switch |
| 87 Courtesy light ON switch | 134/3 Button switch on passenger's side belt |
| 87/1 Remove motor/pump switch (driver's door) | 134/4 Strip switch in passenger's seat cushion |
| 89 Courtesy light ON switch | 135 Interlock by-pass switch |
| 93 Fuel gauge sending unit | |
| 95 Tail, turn signal and stop lights unit | |
| 98/1 Rear side marker lamps | |
| 99 License plate lamp | |

WIRING COLOR CODE

- A - light blue
- B - white
- C - amber
- G - yellow
- H - grey
- L - dark blue

- M - brown
- N - black
- R - red
- S - pink
- V - green
- Z - violet

- AB - light blue/white
- AG - light blue/yellow
- AN - light blue/black
- AR - light blue/red
- BN - white/black
- BR - white/red
- CB - amber/white
- GN - yellow/black
- GR - yellow/red
- HG - grey/yellow
- HN - grey/black
- HR - grey/red
- LR - dark blue/red
- MB - brown/white
- NZ - black/violet
- RV - red / green
- SG - pink/yellow
- VB - green/white
- VN - green/black
- ZB - violet/white